

How Do I Install Them...




Metal T-Post (with barbed wire) - 24" Models

- ◊ Feed the nylon zip ties through the pre-drilled holes at both the top and the bottom of the sign with the "track" side facing inward.
- ◊ Align the sign with the post over the barbed wire at desired location.
- ◊ Connect the ends of the zip tie and pull snug over the post.



Metal T-Post (without barbed wire) - 24" Models

- ◊ Feed the nylon zip ties through the pre-drilled holes at both the top and the bottom of the sign with the "track" side facing inward.
- ◊ Create "loops" with the zip ties inside the sign large enough to accommodate sliding it over the metal post.
- ◊ Slide the sign over the metal post ensuring that the post is inside the loops created with the zip ties.
- ◊ Align the zip tie loops between the nubs on the post to prevent sliding.
- ◊ Connect the ends of the zip tie and pull snug over the post at the desired height.

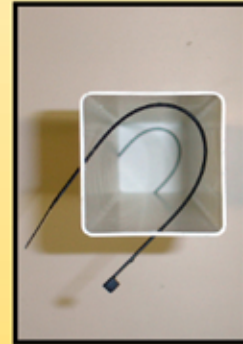

Tree or Wooden Post - 24" Models

- ◊ Determine the desired mounting height.
- ◊ Locate the pre-drilled mounting holes in both the top and bottom of the sign.
- ◊ Insert wood screws through the pre-drilled holes and screw the sign onto the tree or post.
- ◊ For the best results, secure both the top and the bottom of the sign.



Free-Standing - 60" Models

- ◊ 60" Models can be mounted a few different ways...
- ◊ Slide the sign over a metal T-Post that has been driven into the ground and secure the sign with zip ties.
- ◊ Dig a hole large enough to bury the sign at the desired height and backfill the hole with dirt. For a more permanent installation, backfill the hole with concrete.

321 3rd Avenue South
Brookings, SD 57006

605-692-2243

info@nohunt.com

www.nohunt.com